## **Instruments** (Continued)

## Fuel mileage meter

**B** button switches between fuel mileage meters and fuel consumption meter.

When the odometer or tripmeter A is displayed, press **B** button to select any mode of the fuel mileage meter. P.21

The average fuel mileage and fuel consumption will be based on tripmeter A.

- Current fuel mileage:
   Current or instant fuel mileage. If your speed is 0.6 mph (1 km/h) or less, "---" is displayed.
- Average fuel mileage:
   Average fuel mileage since tripmeter A was reset. When "--" is displayed, go to your dealer for service.
- Fuel consumption:

  Total fuel consumption since tripmeter A was reset. When "---" is displayed, go to your dealer for service.
  - ► To reset the average fuel mileage and fuel consumption: → P.23