


Clutch ► Adjusting the Clutch Lever Freeplay

3. Turn the upper clutch cable adjuster all the way in (to provide maximum freeplay).
4. Loosen the lower lock nut.
5. Turn the adjusting nut until the clutch lever freeplay is $\frac{3}{8}$ to $\frac{13}{16}$ in (10 to 20 mm).
6. Tighten the lock nut and check the clutch lever freeplay.
7. Install the right middle fairing with screw.
8. Install the lower fairing.
9. Start the engine, pull the clutch lever in, and shift into gear. Make sure the engine does not stall and the motorcycle does not creep. Gradually release the clutch lever and open the throttle. Your motorcycle should move smoothly and accelerate gradually.

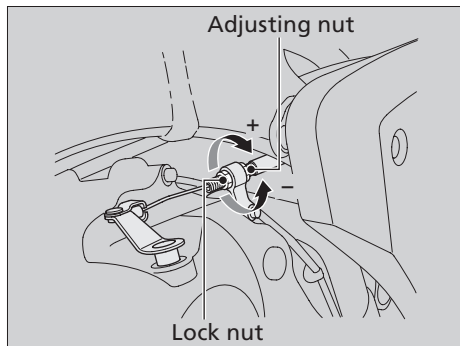

If proper adjustment cannot be obtained or the clutch does not work correctly, see your dealer.