

## Tire Puncture ► Removing Wheels

3. Adjust the drive chain. ➤ [P.71](#)
4. Install and tighten the rear axle nut.

**Torque:** 83 lbf-ft (113 N·m, 11.5 kgf·m).

5. After installing the wheel, apply the brake pedal several times, then recheck the disc for caliper holder to disc clearance. Do not operate the motorcycle without adequate clearance.

If a torque wrench is not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.