


■ Main Fuse & FI Fuse

1. Remove the front seat. [▶ P.55](#)
2. **(CBR1000RR)**
Remove the starter magnetic switch cover.
3. **(CBR1000RR ABS)**
Open the main and FI fuse box cover.
Pull the main fuse and FI fuse out one by one and check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
► Spare fuses are provided in the fuse box. [▶ P.102](#)
4. Reinstall parts in the reverse order of removal.

(CBR1000RR)

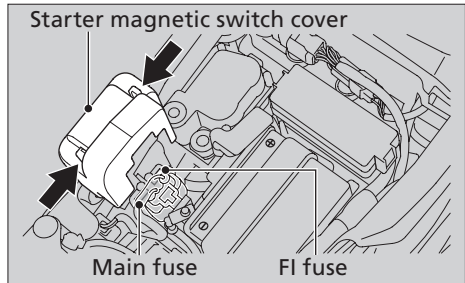

(CBR1000RR ABS)

