

- 3 Press SET button. The blinking RPM is set, and then the display moves to the setting of lighting interval RPM.

At the same time, the blinking bar segment shows the currently applied setting originated from the blinking RPM and the numerical tachometer display shows the interval RPM.

- 4 Each time SEL button is pressed, the number of lighting interval RPM is switched among 0 r/min (rpm), 200 r/min (rpm) and 400 r/min (rpm) in this order. During this setting, the shift indicators light one by one from left and when all indicators light, they go out, and then they start to light from left again.

