


Indicators

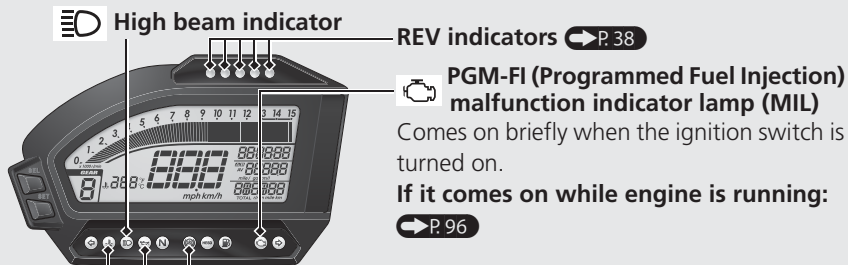

High beam indicator

REV indicators ➔ P. 38



PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)

Comes on briefly when the ignition switch is turned on.

If it comes on while engine is running:

➔ P. 96



Low oil pressure indicator

Comes on when the ignition switch is turned on.

Goes off when the engine starts.

If it comes on while engine is running: ➔ P. 96



High coolant temperature indicator

Comes on briefly when the ignition switch is turned on.

If it comes on while riding: ➔ P. 95



Combined ABS indicator (CBR1000RR ABS only)

Comes on when the ignition switch is turned on.
Goes off when your speed reaches approximately 6 mph (10 km/h).

If it comes on while riding: ➔ P. 97