


# Engine Will Not Start

## I Starter Motor Operates But Engine Does Not Start

Check the following items:

- Make sure engine stop switch is RUN  position [P. 40](#)
- Check the correct engine starting sequence [P. 42](#)
- Check that there is gasoline in the fuel tank
- Check if the PGM-FI malfunction indicator lamp (MIL) is on
  - ▶ If the indicator light is on, contact your dealer as soon as possible.

## I Starter Motor Does Not Operate

Check the following items:

- Check for a blown fuse [P. 111](#)
- Check for a loose battery connection or battery terminal corrosion [P. 68](#)
- Check the condition of the battery [P. 106](#)

If the problem continues, have your motorcycle inspected by your dealer.