


Blown Fuse


Before handling fuses, see “Inspecting and Replacing Fuses.” [► P. 62](#)

Fuse Box Fuses

CBR1000RR/S

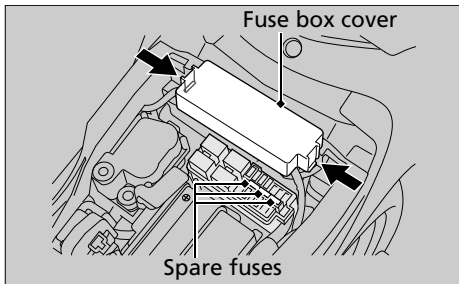

CBR1000RA

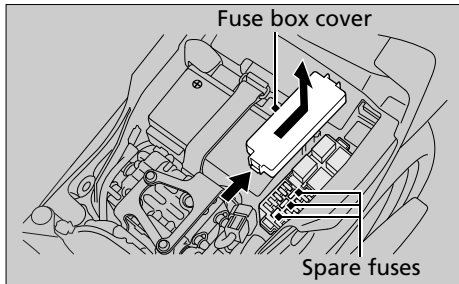

1. Remove the front seat. [► P. 70](#)
2. Remove the fuse box cover.
3. Pull the fuses out one by one check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
4. Reinstall the fuse box cover.
5. Reinstall the front seat.