


Indicators

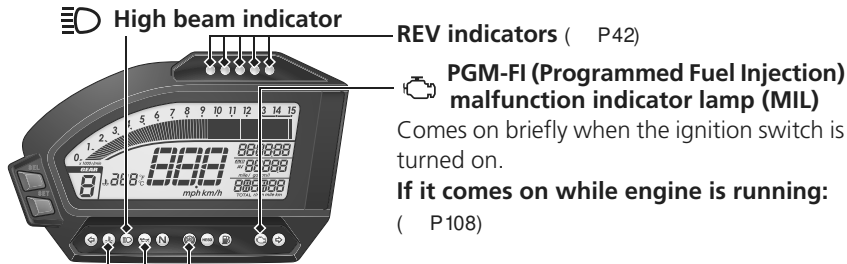

 **High beam indicator**

REV indicators (P42)

 **PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)**

Comes on briefly when the ignition switch is turned on.

If it comes on while engine is running:
(P108)

 **Low oil pressure indicator**

Comes on when the ignition switch is turned on.
Goes off when the engine starts.

If it comes on while engine is running: (P108)

 **High coolant temperature indicator**

Comes on briefly when the ignition switch is turned on.

If it comes on while riding: (P107)

 **Combined ABS indicator**
CBR1000RA only

Comes on when the ignition switch is turned on.
Goes off when your speed reaches approximately 6 mph (10 km/h).

If it comes on while riding: (P109)