

## Indicators *(Continued)*







### REV Indicators

- Comes on briefly when the ignition switch is turned on.

Initial setting

blinking RPM: 13,000 r/min (rpm)

interval RPM: 200 r/min (rpm)

| REV indicators  | r/min (rpm)                      |
|---|----------------------------------|
|  | 12,000 r/min (rpm)               |
|  | 12,200 r/min (rpm)               |
|  | 12,400 r/min (rpm)               |
|  | 12,600 r/min (rpm)               |
|  | 12,800 r/min (rpm)               |
|  | 13,000 r/min (rpm)<br>(red zone) |

- ▶ Setting of REV indicators: ( P27)