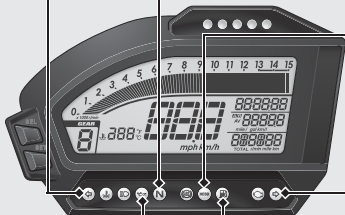


 **Left turn signal indicator**

 **Low oil pressure indicator**


Comes on when the ignition switch is turned on.

Goes off when the engine starts.

**If it comes on while engine is running:** ( P108)

 **Neutral indicator**

Comes on when the transmission is in Neutral.

 **HESD (Honda Electronic Steering Damper) indicator**

Comes on briefly when the ignition switch is turned on.

**If it comes on while engine is running:**  
( P109)

 **Right turn signal indicator**
 **Low fuel indicator**

- Comes on when the ignition switch is turned on.
- Comes on when there is only reserve fuel left in the fuel tank. Remaining fuel when low fuel indicator comes on:  
0.92 US gal (3.5 liters)

**Low fuel indicator and reserve fuel consumption display:** ( P43)