

## Instruments *(Continued)*

### Coolant temperature gauge (📊)

Display range: 94°F (35°C) to 269°F (132°C)

- 93°F (34°C) or less: "---" is displayed.
- Between 251°F (122°C) and 268°F (131°C):
  - High coolant temperature indicator lights.
  - Coolant temperature digits flash.
- Above 269°F (132°C):
  - High coolant temperature indicator lights.
  - "269°F (132°C)" flashes.
- Even if the engine coolant temperature is low, the cooling fan may start running when you rev up the engine. This is normal.

### Pop-up information

In the following cases, the INFO 3 display, or the INFO 3 display and the coolant temperature gauge change to a pop-up information display.

- When an inspection time of your motorcycle is approaching.
- When your motorcycle has helpful information.
- When your motorcycle has a problem with the PGM-FI system.
- **CBR1000S1**

When your motorcycle has a problem with the ÖHLINS Smart EC system.

**Information of the pop-up information:** ➡ P.90