


Right Under Fairing

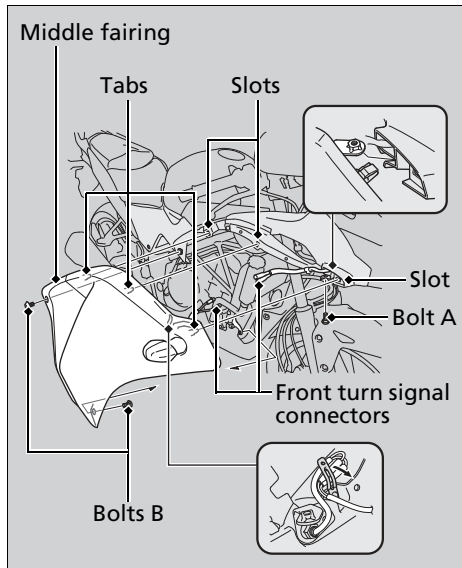

The right under fairing must be removed to replace the oil filter.

Removal

1. Remove the bolt A and bolts B.
2. Release the tabs from the slots.
3. Remove the middle fairing and disconnect the front turn signal connectors.
 - Be careful not to apply weight to the middle fairing.
 - Carefully release the hooks.