

# Maintenance

Please read “Importance of Maintenance” and “Maintenance Fundamentals” carefully before attempting any maintenance. Refer to “Specifications” for service data.

An optional larger tool kit may be available. Check with your Honda dealer’s parts department.

|  |       |                                 |       |
|--|-------|---------------------------------|-------|
| <b>Importance of Maintenance</b> .....               | P. 31 | <b>Side Stand</b> .....         | P. 63 |
| <b>Maintenance Schedule</b> .....                    | P. 33 | <b>Drive Chain</b> .....        | P. 64 |
| <b>Maintenance Fundamentals</b> .....                | P. 36 | <b>Clutch</b> .....             | P. 68 |
| <b>Removing &amp; Installing Body Components</b> ... | P. 49 | <b>Throttle</b> .....           | P. 71 |
| Rear Seat .....                                      | P. 49 | <b>Crankcase Breather</b> ..... | P. 72 |
| Front Seat.....                                      | P. 50 | <b>Other Adjustments</b> .....  | P. 73 |
| Right Under Fairing.....                             | P. 51 | Rear Suspension.....            | P. 73 |
| Battery .....  | P. 53 | Headlight Aim.....              | P. 74 |
| <b>Engine Oil</b> .....                              | P. 54 | Brake Light Switch .....        | P. 74 |
| <b>Air Cleaner</b> .....                             | P. 58 |                                 |       |
| <b>Coolant</b> .....                                 | P. 59 |                                 |       |
| <b>Brakes</b> .....                                  | P. 61 |                                 |       |