


4. Remove the right under fairing by removing the bolt C, bolt D and screw.

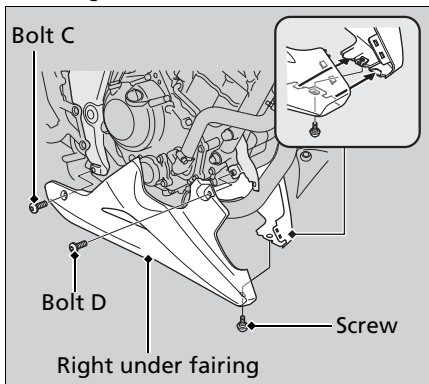

## Installation

Install the parts in the reverse order of removal.