

## Instruments (Continued)

### Setting Mode A

#### 1 Clock setting:

- 1 Turn the ignition switch to the ON position.
- 2 Press and hold **SEL** button and **SET** button, the hour digits start flashing with ordinary display.



- 3 Press **SEL** button until the desired hour is displayed.

- ▶ Press and hold **SEL** button to advance the hour fast.



- 4 Press **SET** button. The minute digits start flashing.



- 5 Press **SEL** button until the desired minute is displayed.

- ▶ Press and hold **SEL** button to advance the minute fast.



- 6 Press **SET** button. The clock is set, and then the display moves to the backlight brightness adjustment.

