







Instruments (Continued)


Ex When blinking RPM is setting 13,000 r/min (rpm) and lighting interval RPM is 250 r/min (rpm).

REV indicators	r/min (rpm)
	11,750 r/min (rpm)
	12,000 r/min (rpm)
	12,250 r/min (rpm)
	12,500 r/min (rpm)
	12,750 r/min (rpm)
	13,000 r/min (rpm)

If the lighting interval RPM is 0, the REV indicator starts to blink when reaching to the blinking RPM.

- Press **SET** button. The interval RPM is set, and then the display moves to the brightness adjustment of the REV indicators.
- Press **SEL** button. The brightness is switched.

► You can adjust the brightness to one of five levels.

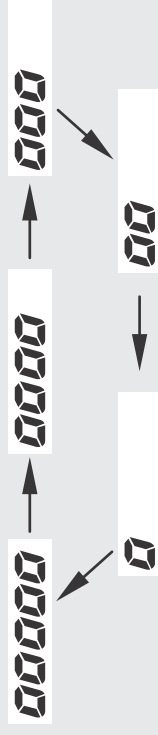

- Press **SET** button. The brightness of the REV indicators are set, and then the display moves to the displaying setting of the tachometer.