


## Indicators (Continued)

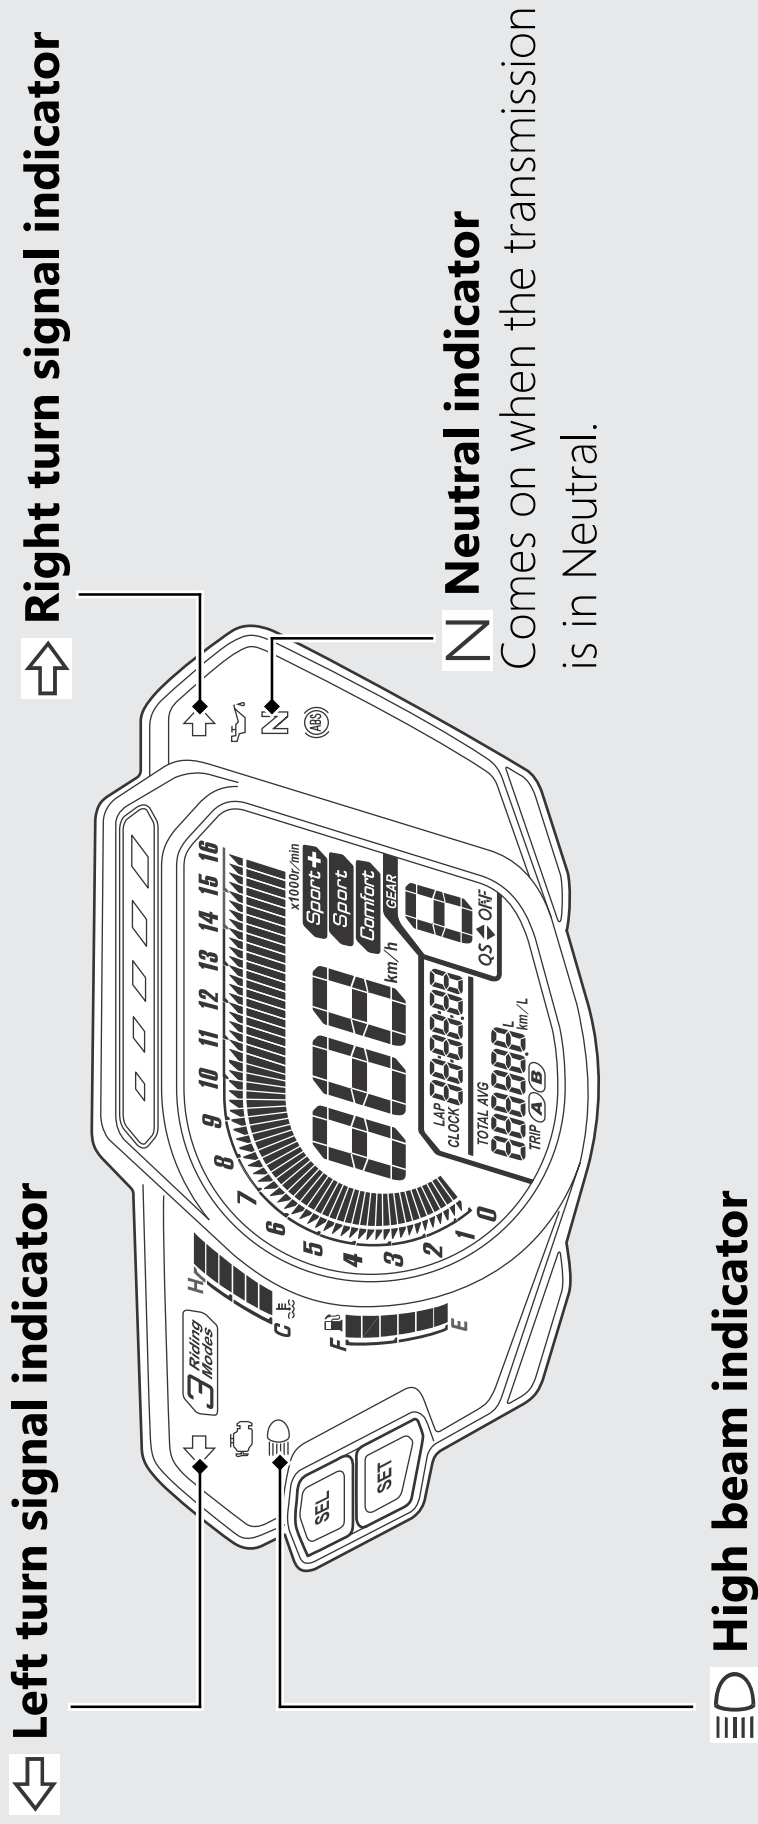

**N Neutral indicator**  
Comes on when the transmission is in Neutral.