

Items		Frequency *1								Refer to page	
		× 1,000 mi	0.6	4	8	12	16	20	24		
		× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4		
Emission-Related Items	Fuel Line	🔧			I		I		I	-	
	Throttle Operation	🔧			I		I		I	81	
	Air Cleaner *2					R			R	52, 67	
	Crankcase Breather *3			C	C	C	C	C	C	82	
	Spark Plug		Every 16,000 mi (25,600 km): I Every 32,000 mi (51,200 km): R								60
	Valve Clearance	🔧					I			-	
	Engine Oil		Initial = 600 mi (1,000 km) or 1 month: R Regular = Every 8,000 mi (12,800 km) or 12 months: R								65
	Engine Oil Filter		R		R		R		R	65	
	Engine Idle Speed	🔧	I	I	I	I	I	I	I	-	
	Radiator Coolant *5				I		I		R	68	
	Cooling System	🔧			I		I		I	-	
	Secondary Air Supply System	🔧			I		I		I	-	
Evaporative Emission Control System *4	🔧					I		I	-		

Maintenance Level

- 🔧 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (📖 P. 122).
- 🔧 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

- I : Inspect (clean, adjust, lubricate, or replace, if necessary)
- C : Clean
- L : Lubricate
- R : Replace