


## Right Under Cowl

### Removal

1. Remove the right middle cowl. ► P. 56
2. Remove the right under cowl by removing the bolts D and screw.

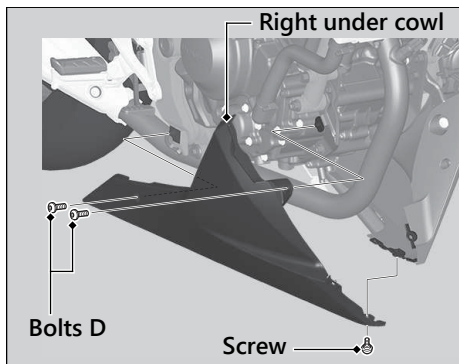

### Installation

Install the parts in the reverse order of removal.