

## Engine Oil ► Changing Engine Oil & Filter

8. Install the new oil filter with the OUT-SIDE mark facing out.
9. Install the oil filter spring into the oil filter cover, and then install the new gasket and oil filter cover by tightening the oil filter cover bolts.

**Torque:** 9 lbf·ft (12 N·m, 1.2 kgf·m)

10. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

**Torque:** 18 lbf·ft (24 N·m, 2.4 kgf·m)

11. Fill the crankcase with the recommended oil (► P. 44, ► P. 128) and install the oil fill cap.

### Required oil

#### When changing oil & engine oil filter:

1.6 US qt (1.5 L)

#### When changing oil only:

1.5 US qt (1.4 L)

12. Check the oil level. ► P. 63
13. Check that there are no oil leaks.
14. Install the right under cowl and right middle cowl.

### NOTICE

Improper installation of the oil filter can result in serious damage to the engine.

