

Changing Air Cleaner Element

Use a new Honda Genuine air cleaner element or an equivalent specified for your motorcycle.

NOTICE

Using the wrong air cleaner element may cause premature engine wear or performance problems.

1. Remove the front seat. ➔ P. 55
2. Remove the air cleaner case cover by removing the air cleaner case cover screws.
3. Remove the air cleaner element by pushing the tabs.
4. Install the new air cleaner element.
 - ▶ Make sure the air cleaner element is installed securely.
5. Install the air cleaner case cover and tighten the air cleaner case cover screws.

Torque: 0.8 lbf-ft (1.1 N·m, 0.1 kgf-m)

6. Install the parts in the reverse order of removal.

