

Blown Fuse

Before handling fuses, see "Inspecting and Replacing Fuses." ► P. 43

Fuse Box Fuses

1. Remove the front seat. ► P. 55
2. Open the fuse box cover.
3. Pull out the fuses one by one to check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
4. Close the fuse box cover.
5. Reinstall parts in the reverse order of removal.

