


Speedometer

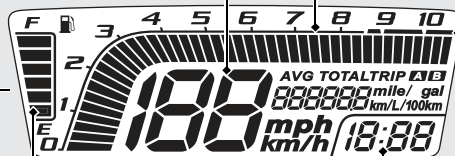

Tachometer

NOTICE

Do not operate the engine in the tachometer red zone. Excessive engine speed can adversely affect engine life.

Tachometer red zone
(excessive engine rpm range)

Clock (12-hour display)
To set the clock: ➔ P.25

Fuel gauge

Remaining fuel when only 1st (E) segment starts flashing:
approximately 0.85 US gal (3.2 liters)



If the fuel gauge indicators repeat flashing or turned off: ➔ P.93