

<b>F</b>	
Flooded Engine .....	34
Front Seat .....	61
Front Suspension.....	86
<b>Fuel</b>	
Gauge.....	19
Recommended.....	36
Remaining.....	19, 20
Tank Capacity .....	36
Fuses .....	50, 104
<b>G</b>	
Gasohol.....	122
Gasoline.....	36, 122
<b>H</b>	
Hazard Switch .....	32
Headlight Aim.....	84
Headlight Dimmer Switch .....	32
Helmet Holder.....	37
High Beam Indicator .....	31
High Coolant Temperature Indicator .....	30
Honda Contacts.....	125
<b>I</b>	
Ignition Cut-off System	
Banking Sensor.....	108
Side Stand .....	74
Ignition Key .....	107
Ignition Switch .....	33
Indicators .....	30
Information Record.....	131
Instruments.....	18
<b>L</b>	
Labels .....	7
Load Limits.....	15
Loading Guidelines .....	15
Low Oil Pressure Indicator .....	30, 91
<b>M</b>	
Maintenance	
Fundamentals.....	45
Importance .....	40
Safety.....	41