

<b>F</b>	
Flooded Engine .....	35
Front Seat .....	62
Front Suspension .....	87
<b>Fuel</b>	
Gauge .....	19
Recommended .....	37
Remaining .....	19
Tank Capacity .....	37
Fuses .....	51, 105
<b>G</b>	
Gasohol .....	123
Gasoline .....	37, 123
<b>H</b>	
Hazard Switch .....	32
Headlight Aim .....	85
Headlight Dimmer Switch .....	32
Helmet Holder .....	38
High Beam Indicator .....	31
High Coolant Temperature Indicator ...	30, 91
Honda Contacts .....	126
Horn Button .....	32
<b>I</b>	
<b>Ignition Cut-off System</b>	
Banking Sensor .....	109
Side Stand .....	75
<b>Ignition Key</b> .....	108
<b>Ignition Switch</b> .....	33, 35, 109
<b>Indicators</b> .....	30
<b>Information Record</b> .....	132
<b>Instruments</b> .....	18
<b>L</b>	
<b>Labels</b> .....	7
<b>Load Limits</b> .....	15
<b>Loading Guidelines</b> .....	15
<b>Low Oil Pressure Indicator</b> .....	30, 92
<b>M</b>	
<b>Maintenance</b>	
Fundamentals .....	46
Importance .....	41
Safety .....	42
Schedule .....	43
<b>Maximum Weight Limit</b> .....	15
<b>Modifications</b> .....	14