












# Maintenance Schedule

| Items  |   | Frequency*1   |          |     |          |      |          |      |          | Refer to page |
|--|---|---|----------|-----|----------|------|----------|------|----------|---------------|
|  |   | x 1,000 mi  | 0.6      | 4   | 8        | 12   | 16       | 20   | 24       |               |
|  |   | x 1,000 km  | 1.0      | 6.4 | 12.8     | 19.2 | 25.6     | 32.0 | 38.4     |               |
| Emission-related Items   | Fuel Line                              |   |          |     | I        |      | I        |      | I        | -             |
|  | Throttle Operation                     |   |          |     | I        |      | I        |      | I        | 72            |
|  | Air Cleaner*2                          |   |          |     |          | I    |          |      | I        | -             |
|  | Spark Plug  | Every 16,000 mi (25,600 km): <b>I</b><br>Every 32,000 mi (51,200 km): <b>R</b>                                  |          |     |          |      |          |      |          | -             |
|  | Valve Clearance                        |   |          |     |          |      | I        |      |          | -             |
|  | Engine Oil  | Initial = 600 mi (1,000 km) or 1 month: <b>R</b><br>Regular = Every 8,000 mi (12,800 km) or 12 months: <b>R</b> |          |     |          |      |          |      |          | 57            |
|  | Engine Oil Filter   |   | <b>R</b> |     | <b>R</b> |      | <b>R</b> |      | <b>R</b> | 57            |
|  | Engine Idle Speed                      |   | I        |     | I        |      | I        |      | I        | -             |
|  | Radiator Coolant*4  |   |          |     | I        |      | I        |      | <b>R</b> | 59            |
|  | Cooling System                         |   |          |     | I        |      | I        |      | I        | -             |
|  | Secondary Air Supply System            |   |          |     | I        |      | I        |      | I        | -             |
|  | Evaporative Emission Control System*3  |   |          |     |          | I    |          |      | I        | -             |
| Exhaust Gas Control Actuator Cable  | Every 16,000 mi (25,600 km): <b>I</b>   |   |          |     |          |      |          |      | -        |               |

## Maintenance Level

-  : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (2 P. 117).
-  : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

## Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace, if necessary)
- R** : Replace    **L** : Lubricate