

Troubleshooting

Engine Will Not Start	P. 80	Other Warning Indication	P. 84
Overheating (High coolant temperature indicator is on)	P. 81	Fuel Gauge Failure Indication.....	P. 84
Warning Indicators On or Flashing	P. 82	Tire Puncture	P. 85
Low Oil Pressure Indicator	P. 82	Electrical Trouble	P. 93
PGM-FI (Programmed Fuel Injection)		Battery Goes Dead	P. 93
Malfunction Indicator Lamp (MIL).....	P. 82	Burned-out Light Bulb	P. 93
Combined ABS Indicator	P. 83	Blown Fuse.....	P. 97
HESD (Honda Electronic Steering Damper) Indicator	P. 83		