

## Engine

Number .....	135
Oil.....	72, 83
Oil Filter .....	85
Overheats .....	106
Starting .....	54
Stop Switch.....	50, 54, 127
Stopping .....	127
Will Not Start .....	105

<b>Environment</b> .....	134
--------------------------	-----

## Equipment

Owner's Manual .....	58, 127
Tool Kit.....	57

## F

<b>Flooded Engine</b> .....	54
-----------------------------	----

## Fuel

Average Fuel Mileage Meter.....	22
Consumption Meter .....	23
Current Fuel Mileage Meter .....	22
Gauge .....	20
Recommended .....	56
Remaining.....	20
Reserve Fuel Consumption.....	24

Tank Capacity .....	56
<b>Fuses</b> .....	71, 123

## G

<b>Gasohol</b> .....	141
<b>Gasoline</b> .....	56
<b>Gear Position Indicator</b> .....	20

## H

<b>Hazard Switch</b> .....	50
<b>Headlight Aim</b> .....	101
<b>Headlight Dimmer Switch</b> .....	50
<b>Helmet Holder</b> .....	57
<b>High Beam Indicator</b> .....	45
<b>Honda Contacts</b> .....	145
<b>Honda selectable torque control</b> .....	53
<b>Horn Button</b> .....	50

## I

### Ignition Cut-off System

Banking Sensor.....	128
Side Stand.....	92

<b>Ignition Key</b> .....	126
<b>Ignition Switch</b> .....	51, 54, 127