

### Starter Motor Operates But Engine Does Not Start

---


Check the following items:

- Check the correct engine starting sequence. ➤ P. 33
- Check that there is gasoline in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
  - ▶ If the indicator light is on, contact your dealer as soon as possible.

### Starter Motor Does Not Operate

---

Check the following items:

- Check the correct engine starting sequence. ➤ P. 33
- Make sure engine stop switch is in the  (Run) position. ➤ P. 30
- Check for a blown fuse. ➤ P. 107
- Check for a loose battery connection or battery terminal corrosion. ➤ P. 50, ➤ P. 61
- Check the condition of the battery.
  - P. 104

If the problem continues, have your motorcycle inspected by your dealer.