

## Tire Puncture ► Removing Wheels

8. Lower the front wheel on the ground.
9. Apply the brake lever and pump the fork several times.
10. Retighten the left axle pinch bolts.

**Torque:** 16 lbf·ft (22 N·m, 2.2 kgf·m)

11. Raise the front wheel off the ground again, and check that the wheel rotates freely after you release the brake.

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.