

**Engine**

Number.....	120
Oil.....	53, 69
Oil Filter.....	71
Overheats.....	94
Starting.....	33
Stop Switch.....	30, 113
Stopping.....	113
Will Not Start.....	93

<b>Environment</b> .....	119
--------------------------	-----

**Equipment**

Owner's Manual.....	38
Tool Kit.....	37

**F**

<b>Flooded Engine</b> .....	33
-----------------------------	----

**Fuel**

Gauge.....	23
Oxygenated.....	126
Recommended.....	36
Remaining.....	23
Tank Capacity.....	36

<b>Fuses</b> .....	52, 107
--------------------	---------

**G**

<b>Gasohol</b> .....	126
<b>Gasoline</b> .....	36

**H**

<b>Harness Band Clip</b> .....	63
<b>Hazard Switch</b> .....	30
<b>Headlight Aim</b> .....	90
<b>Headlight Dimmer Switch</b> .....	30
<b>High Beam Indicator</b> .....	28
<b>High Coolant Temperature Indicator</b> .....	27
<b>Honda Contacts</b> .....	130
<b>Horn Button</b> .....	30

**I****Ignition Cut-off System**

Banking Sensor.....	80, 113
Side Stand.....	80

<b>Ignition Key</b> .....	112
---------------------------	-----

<b>Ignition Switch</b> .....	31, 113
------------------------------	---------

<b>Indicators</b> .....	27
-------------------------	----

<b>Information Record</b> .....	136
---------------------------------	-----

<b>Instruments</b> .....	22
--------------------------	----