

Troubleshooting

Engine Will Not Start	P. 100
Overheating (High coolant temperature indicator is on)	P. 101
Warning Indicators On or Flashing	P. 102
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL).....	P. 102
ABS (Anti-lock Brake System) Indicator	P. 102
Other Warning Indications	P. 103
Fuel Gauge Failure Indication.....	P. 103
Tire Puncture	P. 104
Electrical Trouble	P. 111
Battery Goes Dead.....	P. 111
Burned-out Light Bulb	P. 111
Blown Fuse.....	P. 113

Unstable Engine Operation Occurs Intermittently	P. 116
--	--------