

5. Remove the air cleaner element by releasing the slots from the tabs.
6. Thoroughly clean the inside of the air cleaner housing.
7. Install the new air cleaner element.
  - Insert the air cleaner element at an angle as shown in the illustration (①).
8. Secure the air cleaner element by hooking its slots with the tabs on the air cleaner housing (②).
9. Install the parts in the reverse order of removal.

