

**Air Cleaner ▶ Changing Air Cleaner Element**

- Remove the air cleaner element by releasing the slots from the tabs.
- Thoroughly clean the inside of the air cleaner housing.
- Install the new air cleaner element.
  - ▶ Insert the air cleaner element at an angle as shown in the illustration (①).
- Secure the air cleaner element by hooking its slots with the tabs on the air cleaner housing (②).
  - ▶ Make sure the air cleaner element is installed securely.
- Install the parts in the reverse order of removal.

