

Troubleshooting

Engine Will Not Start	P. 93	
Overheating (High coolant temperature indicator is on)	P. 94	
Warning Indicators On or Flashing	P. 95	
Low Oil Pressure Indicator	P. 95	
PGM-FI (Programmed Fuel Injection)		
Malfunction Indicator Lamp (MIL)	P. 95	
ABS (Anti-lock Brake System) Indicator	P. 96	
Other Warning Indications	P. 97	
Fuel Gauge Failure Indication	P. 97	
Tire Puncture	P. 98	
Electrical Trouble	P. 105	
Battery Goes Dead.....	P. 105	
Burned-out Light Bulb	P. 105	
		Blown Fuse..... P. 108