

Adjusting the Headlight Aim

You can adjust vertical aim of the headlight for proper alignment. Turn the screw in or out as necessary using provided Phillips screwdriver (2 P. 39).

Obey local laws and regulations.

