

Troubleshooting

Engine Will Not Start	P. 95	Blown Fuse.....	P. 110
Overheating (High coolant temperature indicator is on)	P. 96		
Warning Indicators On or Flashing	P. 97		
Low Oil Pressure Indicator	P. 97		
PGM-FI (Programmed Fuel Injection)			
Malfunction Indicator Lamp (MIL).....	P. 97		
ABS (Anti-lock Brake System) Indicator	P. 98		
Other Warning Indications	P. 99		
Fuel Gauge Failure Indication.....	P. 99		
Tire Puncture	P. 100		
Electrical Trouble	P. 107		
Battery Goes Dead.....	P. 107		
Burned-out Light Bulb	P. 107		