

Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” 2 P. 56

Fuse Box Fuses

1. Remove the battery cover. 2 P. 66
2. Open the fuse box covers. 2 P. 111
3. Pull the fuses out one by one with the fuse puller and check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
 - u The fuse puller is stored on the battery cover.

CMX500

- u Spare fuses are provided in the fuse box.

CMX500A

- u Spare fuses are provided in the fuse box and on the battery cover (to access the spare fuse, open the cover).
4. Close the fuse box covers.
 5. Reinstall parts in the reverse order of removal.

