

To select the trip time/air temperature gauge display, current fuel mileage/average fuel mileage/average speed/subtraction trip/amount of remaining fuel/available driving distance display and odometer/tripmeter display, press the **SET** button first, then the **3** button or the **4** button.

Press the **SET** button. The selected display is set.

**Trip time [ELAPSED]/Air temperature gauge [AIR] display ( P30)**

**Current fuel mileage [CONS.]/Average fuel mileage [AVG. CONS.]/Average speed [AVG. SPD.]/Subtraction trip [-TRIP]/ Amount of remaining fuel/Available driving distance display ( P31)**

**Odometer [TOTAL] & Tripmeter [TRIP A/B] display ( P36)**

