


To reset the tripmeter, average fuel mileage and average speed

To reset tripmeter A, average fuel mileage and average speed (these are based on tripmeter A) together, press and hold the **SET** button while tripmeter A is displayed.

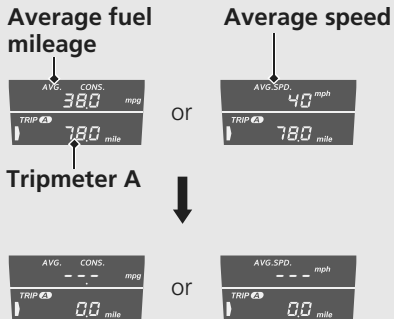

To reset tripmeter B, average fuel mileage and average speed (these are based on tripmeter B) together, press and hold the **SET** button while tripmeter B is displayed.

