

Switches *(Continued)*

CRF1000D



Torque Control switch

Torque Control level setting and
Torque Control on/off. (P53)

Headlight dimmer/Passing light control switch

- ☰☐ : High beam
- ☰☐ : Low beam
- ☰☐ **PASS** : Flashes the
high beam headlight.

Shift up switch (+)

To shift up the gear.
(P68)



Turn signal switch

Pressing the switch turns the turn
signal off.



Horn button

Shift down switch (-)

To shift down the gear. (P68)

N-D Switch

To shift between Neutral
and AT MODE. (P66)

