

Honda selectable torque control (Torque Control)

Torque Control level (engine power control) can be selected or turned on/off.

- u Do not operate the Torque Control switch while riding. Stop the motorcycle first and then turn off or on and select the desired level.
- u The Torque Control setting cannot be changed or turned off when the system is activated (Torque Control indicator flashing).
- u Each time the ignition switch is turned to the ON position, the Torque Control level will automatically be set to level 3 (max).
- u When the Torque Control is turned from the off position to the on position, it will automatically be set to level 3 (max).

Torque Control level setting

The level can be selected by pressing the Torque Control switch.

- u Level 3 is the maximum Torque Control level
- u Level 1 is the minimum Torque Control level

Torque Control on and off

Torque Control can be turned on and off by pressing and holding the Torque Control switch.

Torque Control switch

