



CRF1000D

Start your engine using the following procedure, regardless of whether the engine is cold or warm.

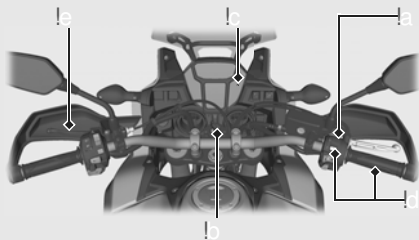

- a Make sure the engine stop switch is in the  (Run) position.
- b Turn the ignition switch to the ON position.
- c Check the transmission is in Neutral (**N** indicator comes on).
- d Press the start button with the throttle completely closed.
- e Make sure the parking brake lever is released before riding.

If Engine Does Not Start (P58)

NOTICE

- If the engine does not start within 5 seconds, turn the ignition off and wait 10 seconds before trying to start the engine again to recover battery voltage.
- Extended fast idling and revving the engine can damage the engine, and the exhaust system.
- Snapping the throttle or fast idling for more than about 5 minutes may cause exhaust pipe discoloration.
- The engine will not start if the throttle is fully open.