- 5. Inspect the sprockets. 2 P. 88
- Clean and lubricate the drive chain.
  2 P. 88

## Adjusting the Drive Chain Slack

Adjusting the chain requires special tools. Have the drive chain slack adjusted by your dealer.

When adjusting the drive chain slack, be careful not to damage the wheel speed sensor and pulser ring.

- **1.** Shift the transmission to Neutral. Stop the engine.
- **2.** Place your motorcycle on the side stand on a level surface.
- 3. Loosen the rear axle nut.

**4.** Loosen the lock nuts on both adjusting bolts.

