



Tachometer

NOTICE

Do not operate the engine in the tachometer red zone. Excessive engine speed can adversely affect engine life.

Tachometer red zone
(excessive engine rpm range)

Speedometer

Fuel gauge

Remaining fuel when only 1st (E) segment starts flashing: approximately 0.8 US gal (3.4 L)

At the same time, the available driving distance is displayed.

If the fuel gauge indicator flashes in a repeat pattern or turns off:

➔ P.142

