

Indicators (Continued)

Torque Control indicator

- Comes on when the ignition switch is turned to the ON position. Goes off when your speed reaches approximately 3 mph (5 km/h) to indicate Torque Control is ready to work.
- Blinks when Torque Control is operating.

If it comes on while riding:  **P.153**

Torque Control OFF Indicator

- Comes on when the Torque Control is turned Off.

Parking brake indicator

CRF1000D/D II

Lights as a reminder that you have not released the parking brake lever.

