


Hazard switch

Switchable when the ignition switch is turned to the ON position.

Rear ABS switch

Switches the ABS function on the rear wheel on/off.  **P.55**

Ignition Switch


Switches the electrical system on/off, locks the steering.

- ▶ Key can be removed when in the OFF or LOCK position.

Steering Lock:  **P.54**

Engine stop switch/START button

Should normally remain in the  (Run) position.

- ▶ In an emergency, switch to the  (Stop) position to stop the engine.

