

## Initial setting

Riding modes	P value	EB value	Torque Control level
TOUR	1	2	6
URBAN	2	2	6
GRAVEL	3	3	6
USER	1 <sup>*1</sup>	2 <sup>*1</sup>	6 <sup>*1, 2</sup>

Notes:

\*1 : Value can be changed.

\*2 : If level 0 (off) is selected, the value will change to level 1 the next time the ignition is turned on.

### P value (Engine output level)

P value has three setting levels.

Available setting range: 1 to 3

- ▶ Level 1 has the most power.
- ▶ Level 3 has the least power.

### EB value (Engine brake level)

EB value has three setting levels.

Available setting range: 1 to 3

- ▶ Level 1 has the strongest engine braking effect.
- ▶ Level 3 has the weakest engine braking effect.