

## **Riding mode** *(Continued)*

### **Torque Control level:**

Torque Control level has eight setting levels.

Available setting range: 0 to 7

- ▶ Level 1 is the minimum Torque Control level.
- ▶ Level 7 is the maximum Torque Control level.
- ▶ Level 0 deactivates the Torque Control.